PREMIER®

MANUAL DE INSTRUCCIONES RIZADOR DE CABELLO ADC-5187CR



ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia. Si necesita soporte adicional, no dude en escribir a: *info@premiermundo.com*



ÍNDICE

DESCRIPCION	. 2
INSTRUCCIONES DE SEGURIDAD	
PREPARACIÓN	
INSTRUCCIONES DE OPERACIÓN	
MANTENIMIENTO	
ESPECIFICACIONES	



PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA



Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.



Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.



Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER


Venezuela:	0800 - ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.



DESCRIPCIÓN

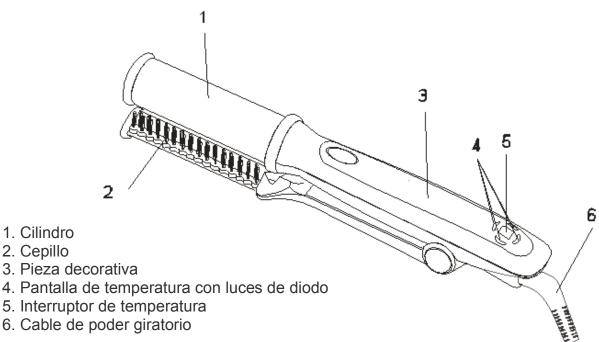

riangle instrucciones de seguridad


- Verifique que el voltaje de la unidad coincide con el del área donde la va a conectar.
- Se recomienda instalar un dispositivo eléctrico de protección en el baño no mayor a 30 amperios. Consulte con un técnico de confianza.
- Los accesorios de la unidad se calientan durante el uso. Evite el contacto con la piel. Asegúrese de que el cable de poder no entre en contacto con las partes calientes de la unidad.
- La unidad debe desconectarse antes de hacer labores de limpieza y mantenimiento, si no está funcionando adecuadamente, tan pronto como termine de utilizarla, y si se retira de la habitación momentáneamente.
- No utilice la unidad con las manos mojadas ni cerca de contenedores de agua como la ducha o la tina, entre otros.
- Al utilizar el alisador en el baño desconéctelo después de utilizarlo para evitar que el agua que pueda estar cerca se introduzca en la unidad.
- El alisador no debe ser utilizado por personas con capacidades físicas o mentales reducidas, ni por niños, sin la supervisión estricta de un adulto responsable.
- Mantenga la unidad fuera del alcance de los niños.
- No se recomienda utilizar un cable de extensión eléctrico.
- No utilice productos abrasivos para limpiar el alisador.
- No utilice el alisador en temperaturas por debajo de -5°C y por encima de 35°C.
- La unidad está diseñada únicamente para uso doméstico.
- Al desconectar el cable de poder recuerde hacerlo del enchufe mas no del cable.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico autorizado.



PREPARACIÓN

El alisador se calienta muy rápidamente, de dos a tres minutos, y la temperatura permanece mientras lo utiliza.

Conecte la unidad y seleccione la temperatura adecuada para su cabello utilizando el interruptor, como se muestra en la Figura 1.

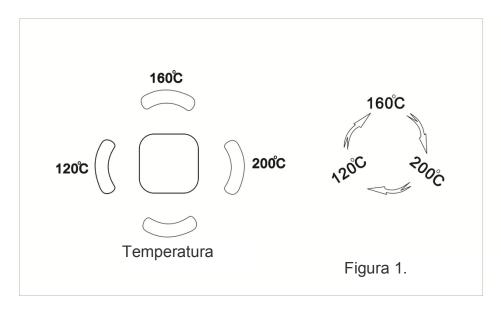


Espere de dos a tres minutos y el alisador estará listo para utilizarse.


Al terminar, desconecte la unidad y colóquela sobre una superficie estable y resistente al calor y permita que se enfríe completamente antes de guardarla.


INSTRUCCIONES DE OPERACIÓN

Mejores resultados con menos calor. Utilizar menos calor significa menos arrugas y quemaduras en el cabello.

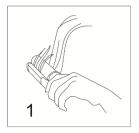





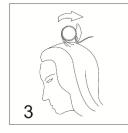

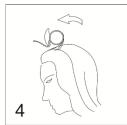



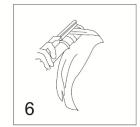

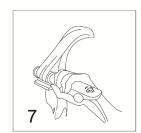



1. Jalar hacia fuera

Coloque el cilindro a un lado de su cuero cabelludo. Deslice el cilindro hacia abajo desde la raíz hasta las puntas. Cerca de las puntas de su cabello, gire el cilindro hacia usted, manteniendo las puntas en el cilindro. Gire de 3 a 5 segundos. Para conseguir un ondulado más grande, inicie el giro antes.

2. Húmedo a seco

Asegúrese de retirar el exceso de agua del cabello y séquelo completamente con una toalla. Desenrede el cabello antes de crear el estilo. Deslice el cilindro suavemente desde la raíz hasta las puntas, con una temperatura máxima según la textura de su cabello.

3. Crear volumen

Con esta técnica puede crear volumen, cuerpo y altura extra. Coloque el cilindro a un lado de su cuero cabelludo. Sostenga el cilindro contra la sección de cabello, presionando en la dirección opuesta a partir del lugar donde la sección del cabello debe caer, y sostenga de 3 a 5 segundos. Luego deslice el cilindro, presionando en la dirección opuesta, manteniendo la tensión y el cabello apretado contra el cilindro, a lo largo de la sección completa del cabello hasta las puntas.

4. Volumen extra

Si quiere aún más volumen, puede utilizar esta técnica. Para el flequillo, utilice el alisador con el cilindro hacia su cuero cabelludo, luego presione suavemente hacia el centro de su cabeza. Mantenga la atención mientras mueve suavemente las puntas. Para obtener mayor altura, enfoque la dirección en la raíz.

5. Alisar

Coloque el cilindro a un lado de su cuero cabelludo. Deslice el alisador hacia abajo desde la raíz hasta las puntas de forma recta.

6. Rizos suaves

Envuelva su cabello alrededor del cilindro y cierre de 5 a 10 segundos. Suelte el cabello suavemente. Manténgalo por más tiempo para rizos más apretados. Para aflojar y separar utilice sus dedos.

7. Jalar hacia dentro

Coloque el cilindro a un lado de su cuero cabelludo. Deslice el cilindro hacia abajo desde la raíz hasta las puntas. Cerca de las puntas de su cabello, gire el cilindro lejos de usted, manteniendo las puntas en el cilindro. Gire de 3 a 5 segundos. Para conseguir un ondulado más grande, inicie el giro antes.

MANTENIMIENTO

- Desconecte el cable de poder y permita que la unidad se enfríe completamente.
- No introduzca la unidad en el agua. Para limpiar utilice una prenda húmeda y luego seque.

ESPECIFICACIONES

Voltaje de entrada: AC 220-240V / 50Hz

Potencia: 40W

Temperatura de operación: 120-200°C

[•] Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL
HAIR CURLER
ADC-5187CR



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com





CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN



Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.



This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.



This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE


Venezuela:	0800 - ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.



I. DESCRIPTION

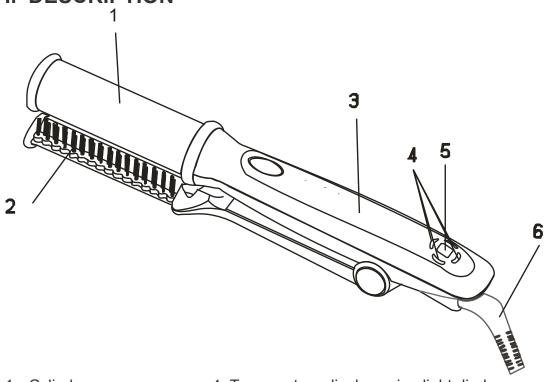

- 1. Cylinder
- 2. Brush
- **3.** Decorative arc piece
- 4. Temperature display using light diodes
- 5. Temperature switch
 - 6. Swivel power cord

Ш. FOR YOUR SAFETY

Read the instructions for use carefully and keep them in a safe place.

- 1) Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
- 2) As an additional safety measure, we recommend the installation of a residual current difference device in the electrical circuit supplying the bathroom, acting at not more than 30mA. Ask your installer for advice.
- 3) The installation of the appliance and its use must however comply with the standards in force in your
- 4) The appliance's accessories become very hot during use. Avoid contact with the skin.. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- 5) The appliance must be unplugged:
 - -before cleaning and maintenance procedures
 - -if it is not working properly
 - -as soon as you have finished using it
 - -if you leave the room, even momentarily
- 6) Caution: Never use you appliance with wet hands or near water contained in bath tubs, Showers, sinks or other containers.





- 7) When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.
- 8) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 9) Children should be supervised to ensure that that they do not play with the appliance.
- 10)Do not use if the cord is damaged, the power cord must be replaced by the manufacturer, its aftersales service or a person with similar qualifications, to avoid all danger.
- 11) Stop using your appliance and contact an Authorized Service Centre if:
 - -your appliance has fallen
 - -it does not work properly
- 12) Your appliance can only be repaired using special tools.
- 13) Do not immerse or put under running water, even for cleaning purposes.
- 14) Do not hold with damp hands.
- 15) Do not hold the appliance by the tongs. Which is hot, but by the handle.
- 16) Do not unplug by pulling on the cord, rather pull out by the plug.
- 17) Do not use an electrical extension lead.
- 18) Do not clean with abrasive or corrosive products.
- 19) Do not use at temperatures below $-5\square$ and above $35\square$.
- 20) Your appliance is designed solely for domestic use. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- 21) Your appliance complies with Chinese National Standards GB4706.1

 GB4706.15


 GB4343.1

 GB17625.1. CCL: Delete

III. GETTING STARTED

Your appliance gets warm very quickly (takes just 2-3 min) and the temperature remains stable throughout use:

- Plug in the appliance

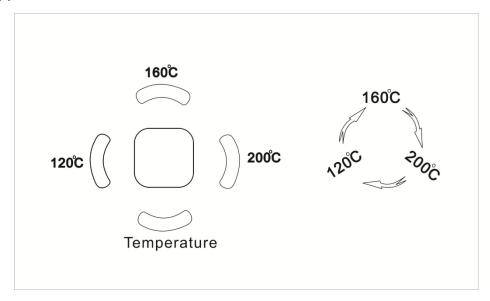



- Select the ideal temperature for your hair using the temperature switch \Box Fig.1 \Box
- wait for 2-3 min, the appliance is ready to use.
- -After use, unplug the appliance, place it on a heat-resistant, flat, stable surface and leave it to cool down completely, Then stored.


IV. OPERATION










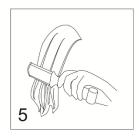

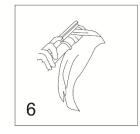



Better results with less heat !Less heat means less worry about creasing, burning, or overworking your hair .Enjoy!

1. Flip out

Position the cylinder side away from your scalp. Glide the Best Rotating Iron down your hair from the roots toward the tips. Near the tips of your hair, turn the cylinder in toward you, keeping the tips on the cylinder. Rotate for 3-5 seconds. For larger flips, start the turn sooner

2. Damp-to-dry

Make sure to remove excess water from the hair and thoroughly towel dry . Detangle the hair before styling. Glide the Best rotating Iron SLOWLY from roots to tips, with the temperature set at the Highest heat setting appropriate to you hair texture.

3. Overdirecting

Overdirecting is a styling technique to create extra body, volume and height .Position the cylinder side toward your scalp. Hold the rotating cylinder against a section of hair, pushing in the opposite direction of where the section of hair is to fall ,hold for 3-5 seconds. Then glide the Best Rotating Iron ,still pushing in the opposite direction, maintaining tension and keeping the hair tight against the cylinder, through the entire section of hair to the tips.

4. Creating extra body & volume

Overdirecting can be used anywhere you need extra body, volume and height .For your bangs ,use the Best Rotating Iron at the root with the cylinder toward your scalp ,then push slightly toward the center of your head. Maintain the tension as you slowly move to the tips. For maximum height, focus the



overdirection at the root.

5. Straighten

Position the cylinder side toward your scalp. Glide the Best Rotating Iron straight down through the hair from roots toward tips ,without angling the cylinder.

6. Soft curls

Wrap your hair around the cylinder and close for 5-10 seconds. Gently release hair. Hold longer for tighter curls .To loosen and separate ,run your fingers through the section.

7. Flip in

Position the cylinder side toward your scalp. Glide the Best Rotating Iron down your hair from the roots toward tips. Near the tips of your hair ,turn the cylinder out and away from you , keeping the tips on the cylinder. Rotate for 3-5 seconds. For larger flips, start the turn sooner.

V. MAINTENANCE

WARNING: Always remove the plug and leave the appliance to cool down on a heat-resistant, flat, stable surface before cleaning.

- a) Never immerse your appliance in water.
- b) To clean your appliance: unplug it, wipe down with a damp cloth and dry using a dry cloth.

VI. MAIN CHARACTERISTIC

- a) Input Voltage: AC220-240V 50Hz
- b) Power: 40W
- c) The working temperature: 120-200

Add schematic diagram